
MODEL 7044/7044-6

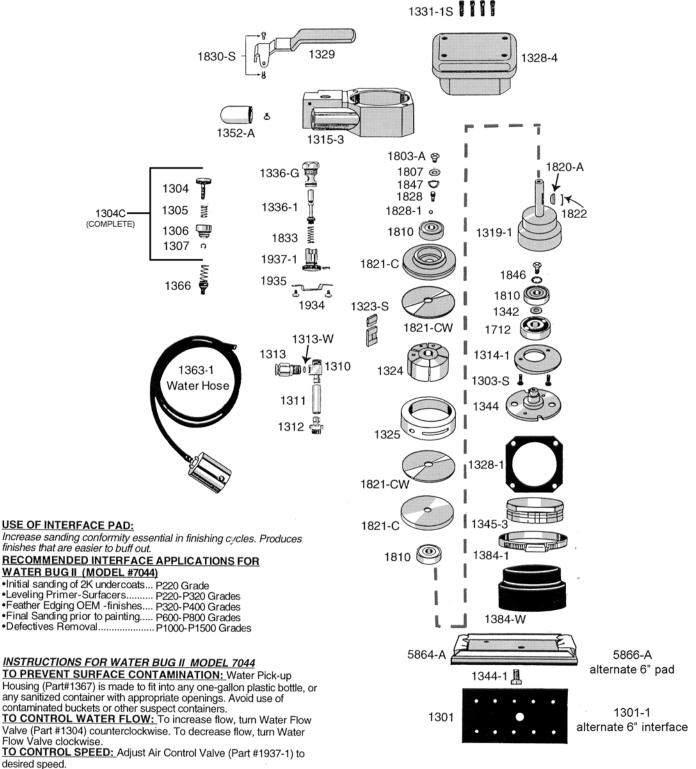

CAUSES FOR NOT OPERATING

- Air control valve not open.
- 2. Lack of lubrication.
- 3. Too much moisture in air lines causing rust to form in the motor.
- Air compressor overheating causing varnish to form in air lines and motor.

TO PREVENT SURFACE CONTAMINATION: Water Pick-up Housing (Part#1367) is made to fit into any one-gallon plastic bottle, or any sanitized container with appropriate openings. Avoid use of

Valve (Part #1304) counterclockwise. To decrease flow, turn Water

TO LUBRICATE SANDER: Disconnect air supply at tool. Adjust Water Control (Part #1304) clockwise to full stop. Depress Trigger (Part #1329) and hold closed. Insert 5-7 drops of good quality lubricant into air inlet. Re-connect air supply. Run sander for 3-5 minutes to disperse excess lubricant which might contaminate sanding surface. CAUTION: Wipe any excess oil off of Muffler/Air Diffuser (Part #1352-A)