



HUTCHINS
MANUFACTURING COMPANY

the PROFINISHERS®

Quality Products for All Phases of Surface Preparation

PO Box 5668
Pasadena, CA 91117

http://www.hutchinsmfg.com
e-mail: info@hutchinsmfg.com

Phone: 626-792-8211
Fax: 626-792-8574

How to Clean the Vacuum Cavity

Using Part No 1335-6C Vacuum Cavity Cleaning Tool

For Models: 8600-8606, 8650-8660

1. To expose Vacuum Cavity, twist Collar off Air Valve clockwise. If Collar is too tight, twist Hose clockwise from Collar to expose Cavity.
2. Compress Cleaning Tool with fingers. Insert tool ends in Cavity. Release finger pressure to expand tool ends internally. (Secure VA/DF Control in DF Mode to prevent VAC Valve fracture.)
3. Hold Sander at eye level with Cavity pointed down. Work tool carefully in & out to disperse vacuum dust build-up.
4. Reconnect Collar or Hose. Trigger full air to blast dust residue into hose.

